
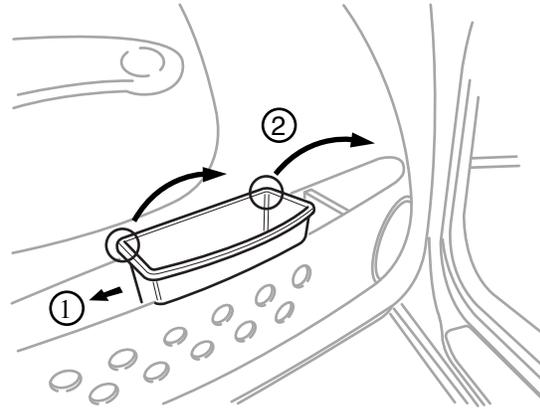


•PT Cruiser "Hip Pocket" Trash Bin Instructions•

1. To install: Place into door pocket about an inch from the speaker. The front of the Bin will seat along the edge of the door pocket. Press the rear edge of the Bin until it snaps into place. Slide Bin toward the speaker until it stops.
2. To remove: Slide Bin rearward about an inch. Pull out and up on rear corners.

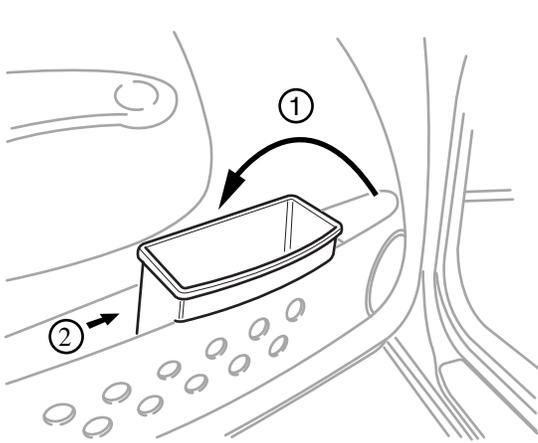

To clean: Use mild detergent with warm water, or the top rack of your dishwasher.

#P1135

