


Centering Guide Installation Instructions

For '72 - '80 MGB Center Console

1. Remove the existing plate from the armrest.
2. Remove the latch striker from this plate.
3. Snap the striker onto the centering guide.
4. Attach the centering guide to the armrest.
5. Loosen armrest hinge screws slightly and close armrest to test fit. Tighten all screws.

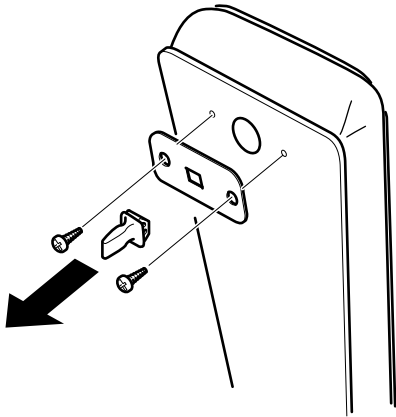

#P1047

