


• Miata Trunk Shield Installation Instructions •

1. Remove the 10mm bolt, and reinstall with guard as shown in the illustration.

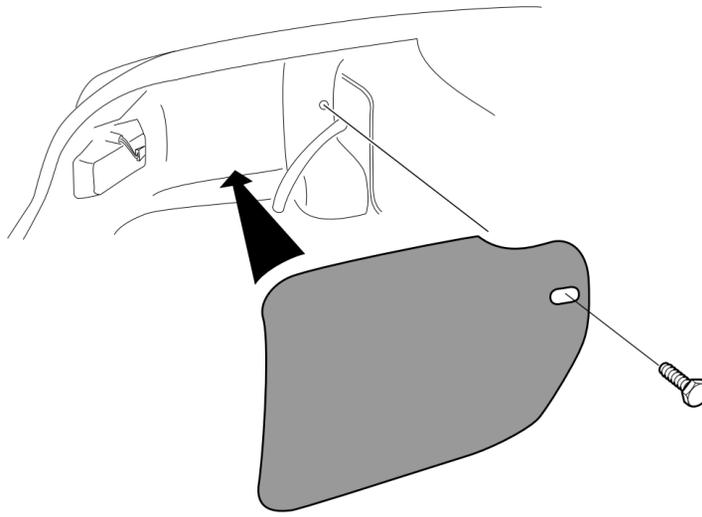

#P1069

